

AL-2 AUTO LOGIC CONTROLLER – SINGLE PHASE

To connect to Grifco Motor 58006 Cap Start and Run

Wiring Diagram: 1069

Connections:

Controller	Motor
Z2	A yellow
U2	AN red
U1	NA black
CA	N blue
earth	Green/yellow

To reverse rotation, interchange Z2 and CA at the controller

Start winding: A & N

Run Winding: AN & NA