

Digi-Code[®]

WIRELESS KEYPAD LKP-1

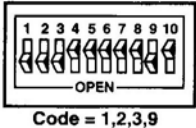
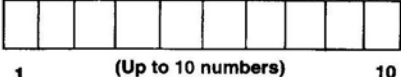


Wireless Keypad is a battery operated device that will operate a Digi-Code receiver using a four digit PIN
 Pressing any key will light the Keypad.
 The keypad will store the last PIN entered in memory, even if the battery is removed.
 Pressing any key within 30 seconds after the door has been activated will activate the door again.

Mounting the Keypad

Choose a location that will not interfere with the normal operation of the door or grill.
 Mount keypad with 2 screws to the wall. The bottom screw hole is accessed by removing battery cover.

Programming to a Digi-Code receiver LRX-1 or LRX-1E

<p>Code Switch If the flat side, or the side you push down is toward the number, then the switch is ON</p>	
<p>Write the ON numbers of your RADIO CODE in the boxes at this time. A RADIO CODE with all switches OFF can NOT be used.</p>	<p style="text-align: center;">Switches</p> 

1. Refer to the DIP switch settings in your receiver (or remote), and note on chart which switches are in the ON or closed positions.
2. Press the RADIO LEARN button twice. The light by the Digi-Code label will come on and stay on.
3. Press the numbers that represent the closed switches on the receiver (i.e. if switches 2, 4, and 6 are closed enter 246. For switch position 10, use the 0 key).
4. Press the RADIO LEARN button once.
5. To test if you have properly programmed in the radio code, enter the factory set PIN 1234. The receiver should operate.

Programming a new PIN number.

1. Press the ACCESS LEARN number twice. After doing this, the light by the Digi-Code label will come on and stay on.
2. Enter 1234 (factory default), then your new 4 digit PIN, or if you have already programmed your pin – enter this number and then the new PIN you wish to change it to.
3. Press the ACCESS LEARN button once. The light by the Digi-Code label will turn off. The new PIN number has been accepted.

Clear All Memory – Return to Factory Default Settings.

Press and hold both the RADIO LEARN and ACCESS LEARN buttons for approximately 10 seconds until the lights on the keypad go off. The unit now has a factory default PIN of 1234 and ALL radio codes have been erased.

Normal Operation

When the keypad is programmed properly, the door or grill should operate by pressing the 4 digits of your PIN. The door or Grill will activate after pressing the fourth number and the indicator light will stay on for one second to show that the signal is being sent to the receiver. The keypad will blink on and off.
 After each Keystroke, the indicator will light.
 After pressing any key, all the keys will light up.

Troubleshooting

The correct PIN must be entered within 20 keystrokes, otherwise the keypad will stop operation for 5 minutes. The user has 25 seconds between keystrokes to enter the correct code.
 If you forget your PIN, you will have to reprogram your keypad again.
 If the keypad lights go off after the first keystroke, the battery needs replacing.

Battery Replacement

The keypad uses a 9 volt battery.